



Toshiba Satellite L305D-S5895 CD Drive Replacement CD Drive Replacement

This guide will provide you with the instructions needed to replace the CD Drive on a Toshiba Satellite L305D-S5895.

Written By: Nathan Merlan



INTRODUCTION

You will learn how to replace a broken CD Drive on a Toshiba Satellite L305D-S5895.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Toshiba Satellite L305D-S5895 CD Drive](#) (1)

Step 1 — CD Drive



- Locate the screw underneath the RAM cover.
- ⓘ If you do not know how to access RAM cover view this repair guide [Toshiba Satellite L305D-S5895 RAM Replacement](#).

Step 2



- Undo screw with your Phillips #0 screwdriver.

Step 3



- Push out CD Drive using your finger.
- ❗ You will have to go underneath the plastic cover of the laptop to access it, as shown in the picture.

Step 4



- Use your fingers to pull out the CD Drive by the face of the drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 05:41:25 AM.

